


-A-R-T-E-M-

ARTEM MEDIUM SMOKE MACHINE INSTRUCTIONS FOR USE AND MAINTENANCE

The Artem Medium Smoke Machine has been designed for exterior use.

IT SHOULD NOT BE USED INDOORS OR IN VERY CONFINED SPACES, NOR SHOULD IT BE LEFT UNATTENDED AT ANY TIME WHEN IN OPERATION.

INSTRUCTIONS FOR USE

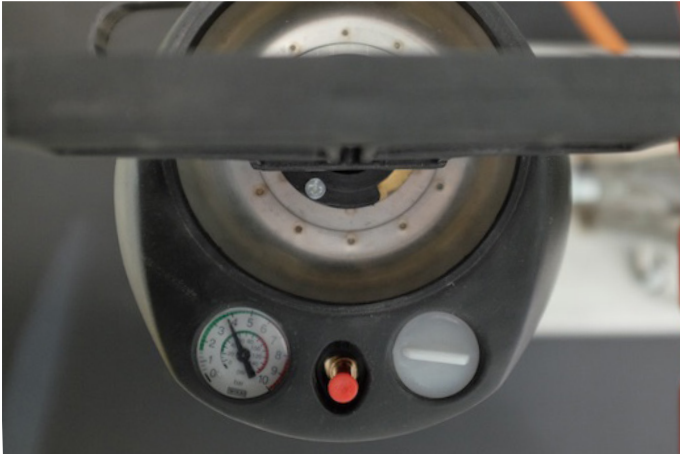

1) Fill Pegler with Smoke Oil, and pressurise to 2 to 3 bar.



2) Connect gas regulator to gas cylinder, and open valve.




3) Slowly open **Gas Valve** sufficient to just hear the hissing of the gas




4) Ignite gas with a benzo, and allow coil to heat up to a dull red.



5) Adjust **smoke output knob** accordingly

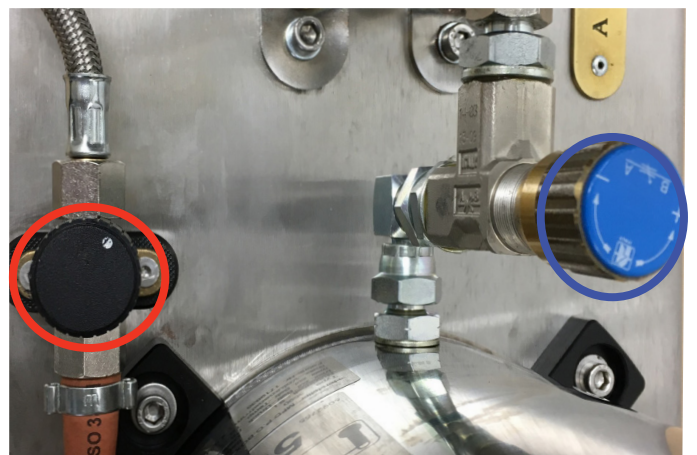

6) Fine tune **smoke & gas** output using the controls

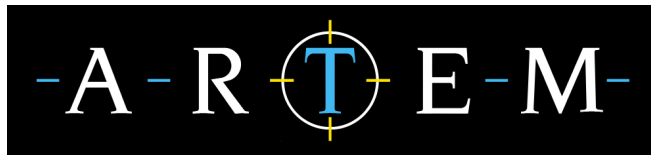

INSTRUCTIONS FOR USE

- To ignite -Turn gas supply on, using the **gas knob** sufficient to just hear the hiss of gas – ignite using a benzomatic. Adjust gas supply and allow coil (as observed through holes in barrel), to heat up until just turning a dull red – **DO NOT LET THE COIL OVERHEAT.**
 - SMOKE output is adjusted by turning **smoke valve knob**.
- As the smoke output is increased the gas supply should be increased in proportion. If smoke output turns to liquid the gas requires to be tuned up (SWITCH OFF SMOKE WHILE COIL IS HEATING UP)
- If smoke output turns light brown the coil is too hot indicating that the gas supply should be turned down.
- Always adjust gas supply to balance smoke output. **WHEN NOT PRODUCING SMOKE TURN OFF GAS** - After use turn off smoke fluid slightly before gas to allow liquid in coil to clear. Allow smoke gun to cool before replacing in carrying case.



CARE AND MAINTENANCE

The smoke machine should be kept clean to avoid the ingress of dirt particles when filling with oil.

FAULT FINDING

No Gas Supply	Check gas supply by listening for a hissing noise and smell.
No Smoke Supply	Check coil – remove and blow through, replace if necessary. To check fluid ways and coil are clear

Manufactured by Artem Ltd